



Enterprise IP Phone SIP-T32G

**CUBICAL WARRIOR
QUICK START GUIDE**



2216 36th Street | Suite 100 | Everett, WA 98201


 1.877.208.9710  hello@nwvox.com

IP Phone Overview

What's in the box

The following items are included in your package. If you find anything missing contact Northwest Vox.


IP Phone

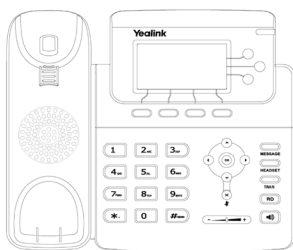


Handset



 
Handset Cord




Ethernet Cable

 

Stand

 

Power Adapter
(Optional)

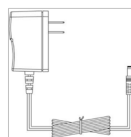


Quick Start Guide



CD-ROM



IP T32G Features

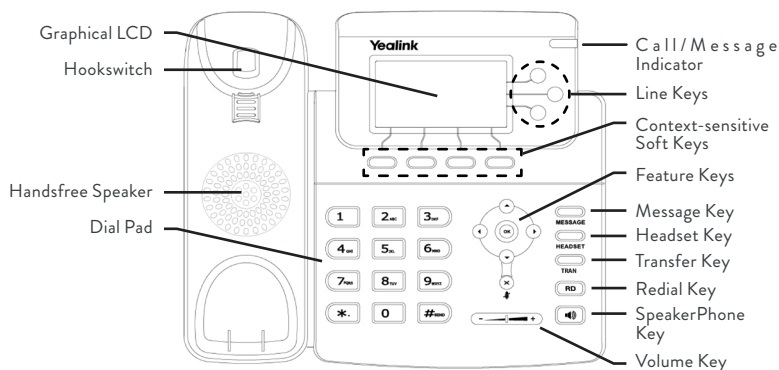


Installation


Basic Set-up

Assembling the Phone:

① Connecting Handset and Headset:

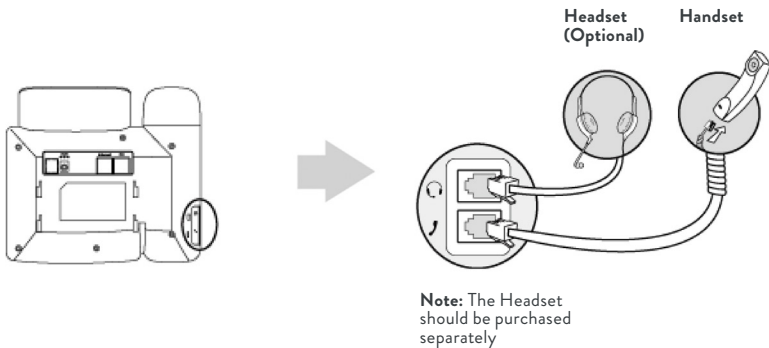


② Attaching the Base:

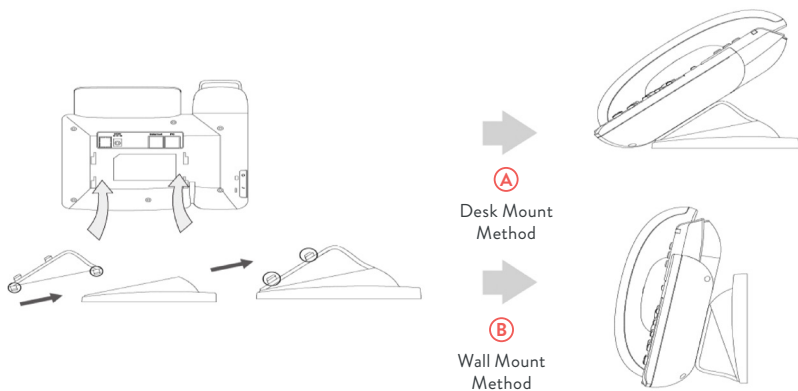

Assembly continued

③ Connecting Network and Power:



You have two options for network and power connections. Northwest Vox will advise you on

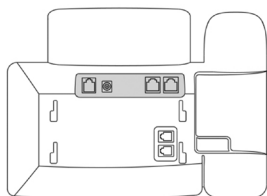

AC Power
Option

Ⓑ

PoE (Power over
Ethernet) Option

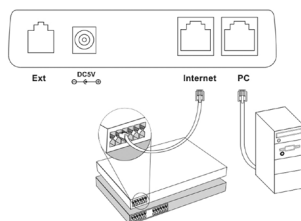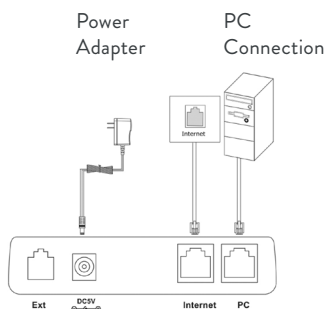

Note: If inline power (PoE) is provided, you do not need to connect the power adapter. Make sure the Ethernet cable and hub/switch are PoE compliant.

IEEE 802.3af compliant PoE Hub/Switch PC Connection

Startup

After the IP phone is connected to the network and supplied with power, it automatically begins the initialization process. After startup, the phone is ready for use. You can configure the phone via web user interface or phone user interface.



2216 36th Street | Suite 100 | Everett, WA 98201

CONTACT US

We know your phone will inevitably break from your sheer strength! This guide is so the warrior knows how to hang up the phone when the face plate flies off. Oh, and call us if this happens.

☎ 1.877.208.9710 ✉ hello@nwvox.com