

Enterprise IP Phone SIP-T38G

GATEKEEPER
QUICK START GUIDE



2216 36th Street | Suite 100 | Everett, WA 98201


 1.877.208.9710  hello@nwvox.com

IP Phone Overview

What's in the box

The following items are included in your package. If you find anything missing, contact Northwest Vox.


IP Phone

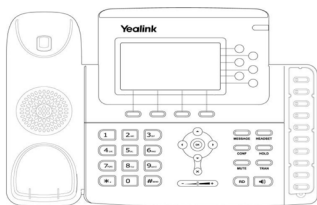


Handset



 
Handset Cord




Ethernet Cable

 

Stand

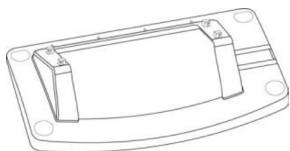


Power Adapter
(Optional)

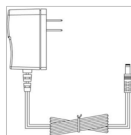

Quick Start Guide &
Quick Reference Guide



T36G Features


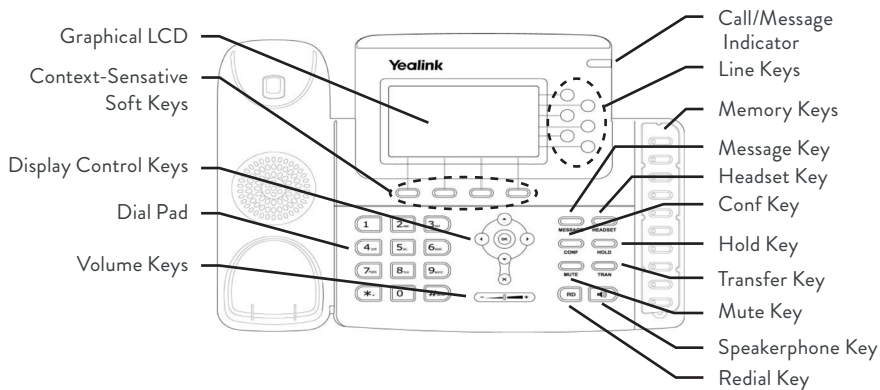


Installation

Basic Set-up





Assembling the Phone:

- 1 Attach the stand:

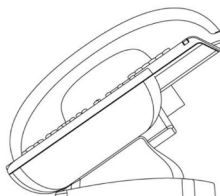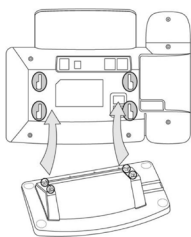

Stand attached


- 2 Connect the handset and optional headset:

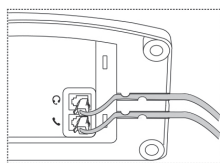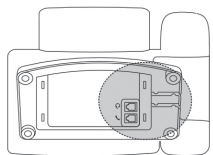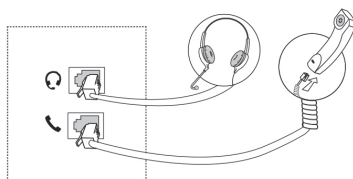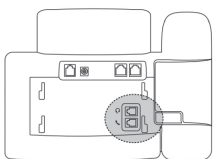

Assembly continued



③ Connect the network and power:

You have two options for network and power connections. Northwest Vox will advise you on which one to use.

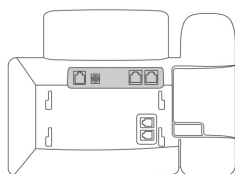

➡
Ⓐ
AC Power
Option

➡
Ⓑ
PoE (Power over
Ethernet) Option

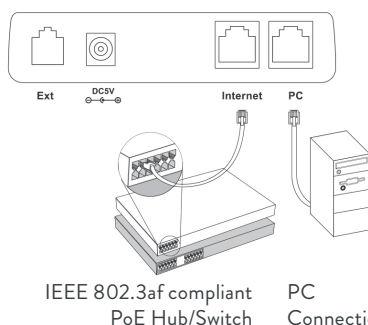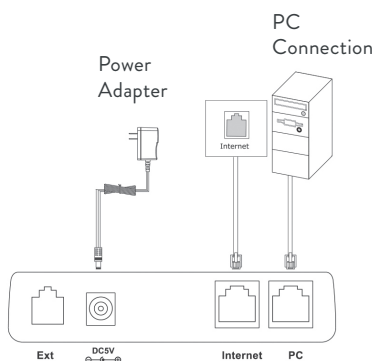

Note: If inline power (PoE) is provided, you do not need to connect the power adapter. Make sure the Ethernet cable and hub/switch are PoE compliant.

Startup

After the IP phone is connected to the network and supplied with power, it automatically begins the initialization process. After startup, the phone is ready for use. You can configure the phone via web user interface or phone user interface.



2216 36th Street | Suite 100 | Everett, WA 98201

CONTACT US

GateKeeping is very important for large castle real estate. Controlling the gate to the office is difficult. Congratulations! You will master the phone system before anyone else!

☎ 1.877.208.9710 ✉ hello@nwvox.com