



A black Yealink CP860 HD conference phone is shown from a three-quarter perspective. The device has a large, textured speaker grille on top. Below the grille is a control panel with a small LCD screen displaying 'Kyle', '10:45 39', and '2014-04-25'. Below the screen are buttons for 'History', 'Directory', 'DND', and 'Menu'. The control panel also features a numeric keypad with function labels like '1. LND', '2. LND', '3. DEP', '4. CHG', '5. BL', '6. MND', '7. FDIS', '8. TUV', '9. WXYZ', and '0', along with a '*' key, a '#/SEND' key, and 'OK' and navigation buttons. The 'HD' logo is visible on the bottom left of the control panel, and 'CP860' is printed on the bottom right.


📞 1.877.208.9710 ✉️ hello@nwvox.com

IP Phone Overview

What's in the box

The following items are included in your package. If you find anything missing contact Northwest Vox.


IP Phone

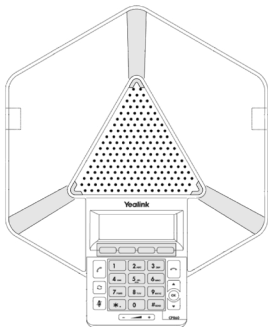


3.5mm Jack Cable



Power Adapter

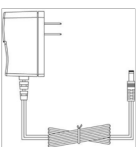


Ethernet Cable

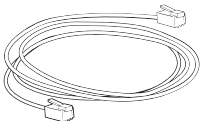


Quick Start Guide



Expansion Microphone
(Optional)

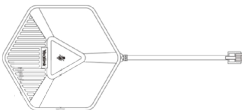

CP860 Features

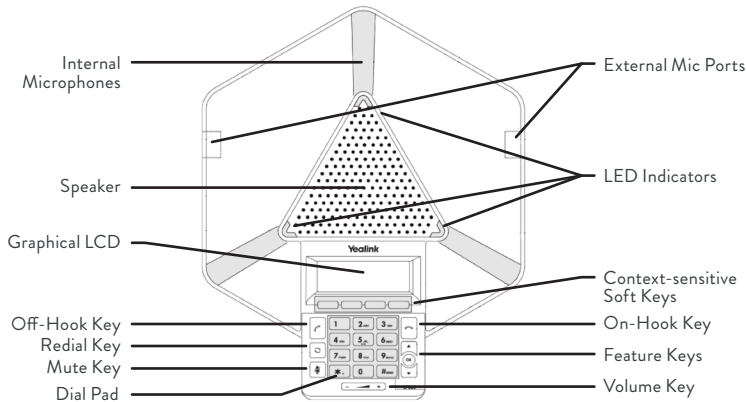


Installation

Basic Set-up

① Connecting Network and Power

You have two options for network and power connections. Northwest Vox will advise you on which one to use.

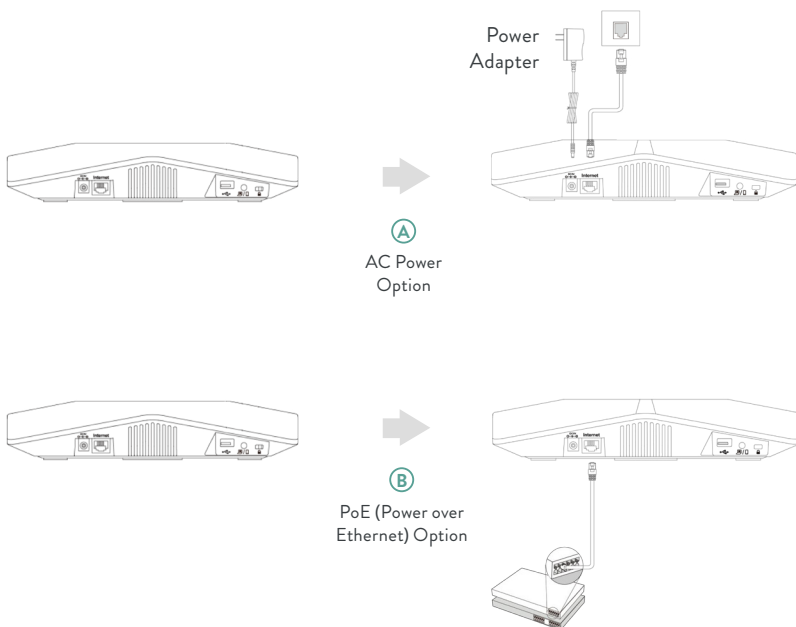


Note: If inline power (PoE) is provided, you do not need to connect the power adapter. Make sure the Ethernet cable and hub/switch are PoE compliant.

Assembly Continued


② Connecting the Optional External Microphone

You can connect optional External Microphones to enhance the room coverage of the conference phone.

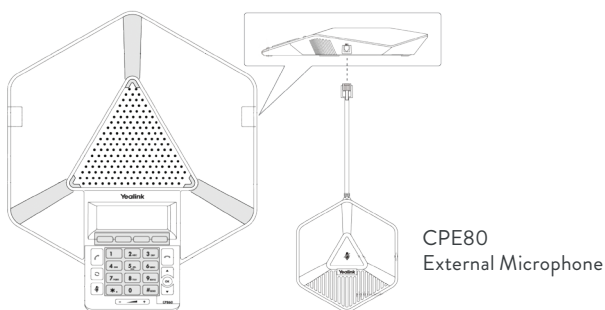


③ Positioning the Optional External Microphone

The CPE80 External Microphone is a directional microphone. Its coverage range is 60 degree. Ensure the microphone faces the speaker.

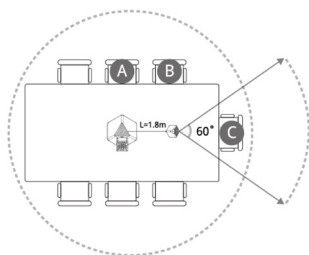

Ⓐ Phone and Single Expansion Setup:

When the size of the conference room is more than 16 (4*4) square meters one expansion microphone should be connected to the CP860 IP conference phone.

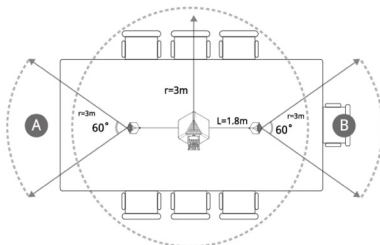


Ⓑ Phone and Double Expansion Setup:

When the size of the conference room is more than 36 (6*6) square meters, two expansion microphones should be connected to the CP860 IP conference phone.

Assembly Continued

④ Connecting the Optional PC or Mobile Device

You can connect a PC or mobile device to listen to the PC or mobile audio using your conference phone.

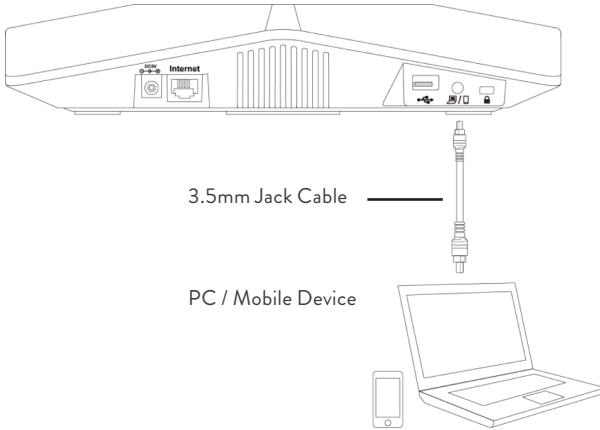

Startup

After the IP phone is connected to the network and supplied with power, it automatically begins the initialization process. After startup, the phone is ready for use. You can configure the phone via web user interface or phone user interface.



2216 36th Street | Suite 100 | Everett, WA 98201

CONTACT US

You never know when this fancy phone may crawl off the desk and take over the office. We recommend protecting your team with skynet insurance.

☎ 1.877.208.9710 ✉ hello@nwvox.com