



Enterprise IP Phone SIP-T21P & SIP-T21

CUBICAL WARRIOR QUICK START GUIDE




2216 36th Street | Suite 100 | Everett, WA 98201

☎ 1.877.208.9710 ✉ hello@nwvox.com

IP Phone Overview

What's in the box

The following items are included in your package. If you find anything missing, contact Northwest Vox.

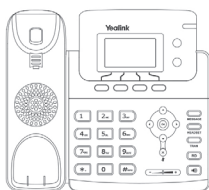

IP Phone



Handset



Handset Cord



Stand



Ethernet Cable




Power Adapter
(Optional)





Quick Start
Guide & Quick
Reference Guide

Assembling the Phone:

- 1 Attach the stand:


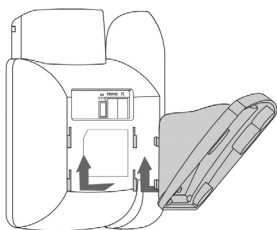


A

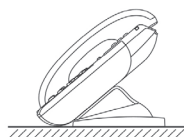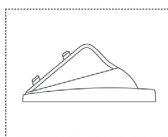



Desk Mount Method

B

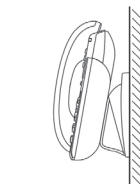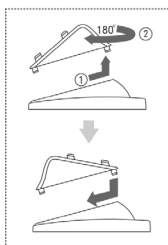

Wall Mount Method

- 1 Connect the handset and optional headset:

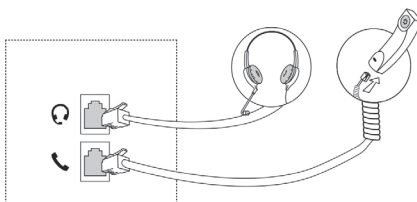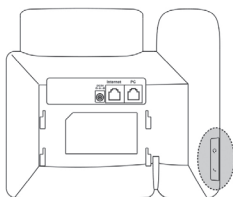


Note: The headset should be purchased separately.

Continued


Assembly continued

① Connect the network and power:

You have two options for network and power connections. Northwest Vox will advise you on which one to use.

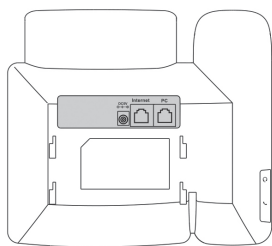


➔
A
AC Power Option

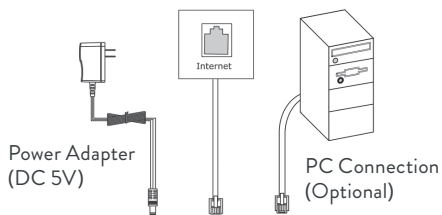

➔
B
PoE (Power over Ethernet) Option

IEEE 802.3af compliant
PoE Hub/Switch

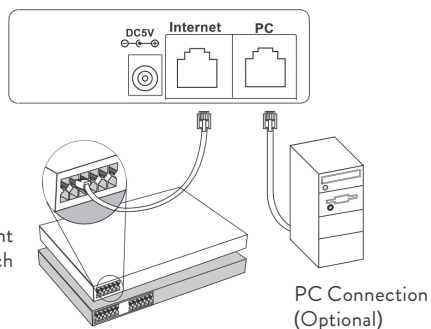

Note: PoE is only applicable to the SIP-T21P IP phone. If inline power (PoE) is provided, you do not need to connect the power adapter. Make sure the Ethernet cable and hub/switch are PoE compliant.

Startup

After the IP phone is connected to the network and supplied with power, it automatically begins the initialization process. After startup, the phone is ready for use. You can configure the phone via web user interface or phone user interface.



2216 36th Street | Suite 100 | Everett, WA 98201

CONTACT US

We know your phone will inevitably break from your sheer strength! This guide is so the warrior knows how to hang up the phone when the face plate flies off. Oh, and call us if this happens.

☎ 1.877.208.9710 ✉ hello@nwvox.com